


Operation Guidance on BMS upgraded By CAN box

Note:

If battery need upgrade the firmware, please disconnect all the Communication cables of The 'M/S' terminal, BMS Monitor was used to upgrade firmware or monitor battery real time running data.


1. Driver Installation

Install the 3 drivers in 'CAN Drivers' Folder

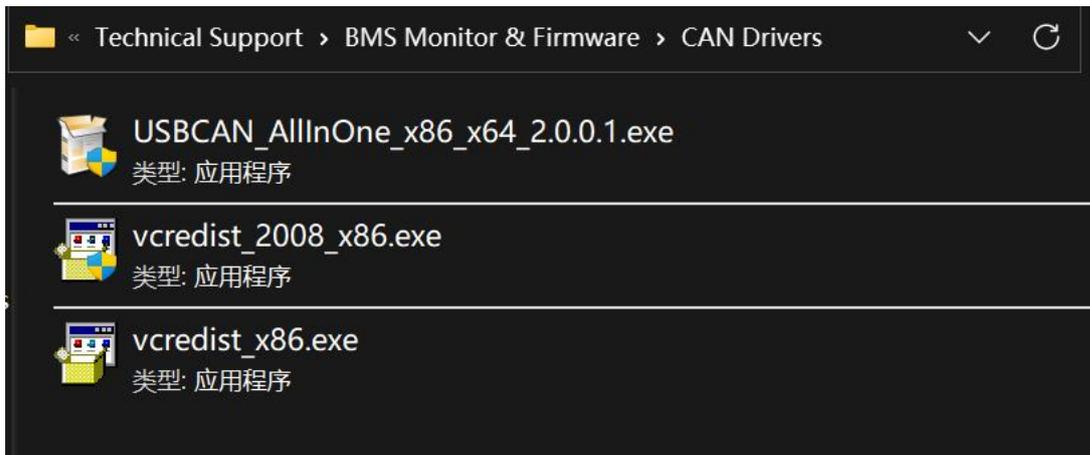

2. Formats setting


Set the PC Format on 'Chinese (Simplified China)'

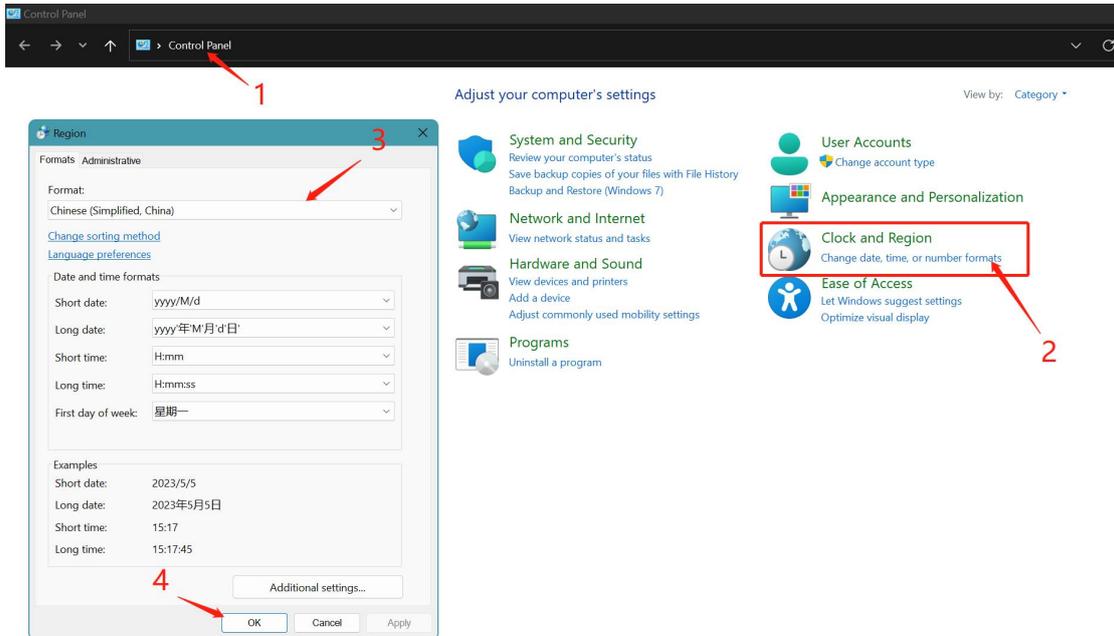


3. Firmware upgrade by CAN Bus Tool & BMS Monitor

(1) Open the “BMS_TOOL.exe”;

kernelDlls	2022/8/5 2:32	文件夹	
kernelDlls_1	2022/8/5 2:32	文件夹	
kernelDlls-32	2022/8/5 2:32	文件夹	
BMS_TOOL.exe	2022/7/24 22:26	应用程序	554 KB
BMS_TOOL.exe.config	2022/4/5 2:39	CONFIG 文件	1 KB
BMS_TOOL.pdb	2022/7/24 22:26	PDB 文件	446 KB
CHUSBDLL64.dll	2017/1/6 19:10	应用程序扩展	19 KB

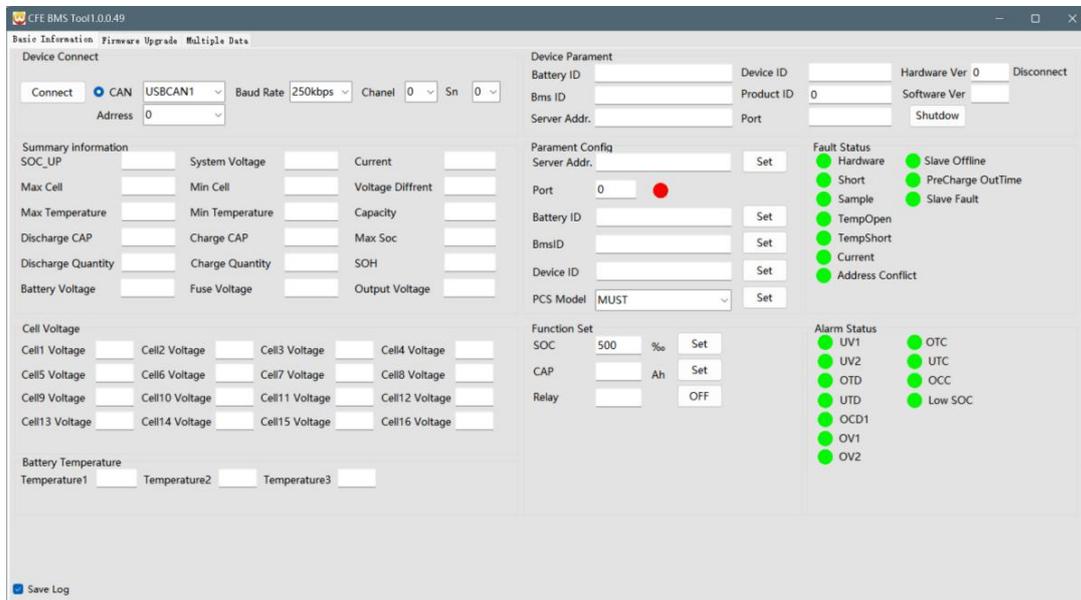


(2) Follow the steps below to do Firmware Upgrade

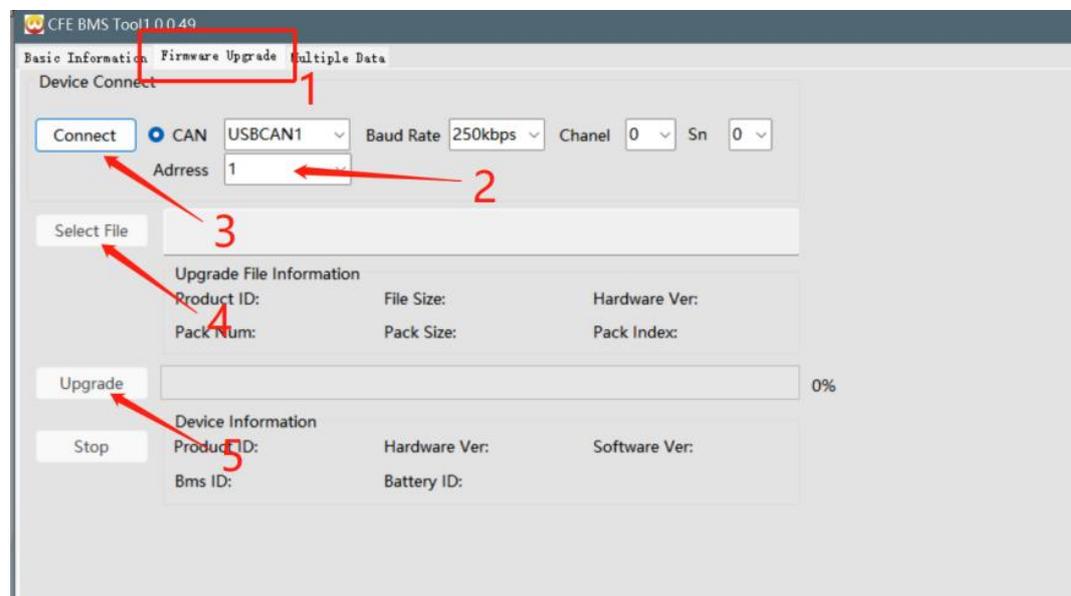

① Choose “Firmware Upgrade” icon

② Select “Address” of the battery (Match the SW3 on the battery)

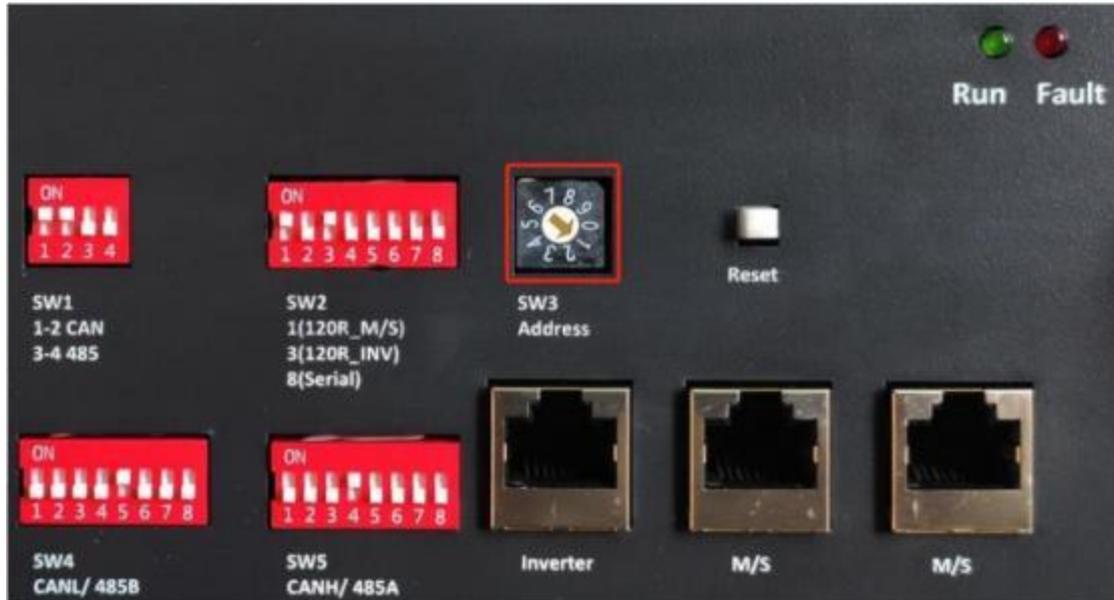

- ③ Click “Connect” icon to connect the battery
- ④ Click “Select File” to select Firmware
- ⑤ Click “Upgrade” to do Upgrade the battery

- (3) After the firmware upgraded, the battery will Turn OFF automatically
- (4) Turn the battery on than the upgrade is done

For more support please check CFE Support Website
[Service \(cfenergygroup.com\)](http://Service.cfenergygroup.com)