


CFE-PVG2 & 3

User Manual

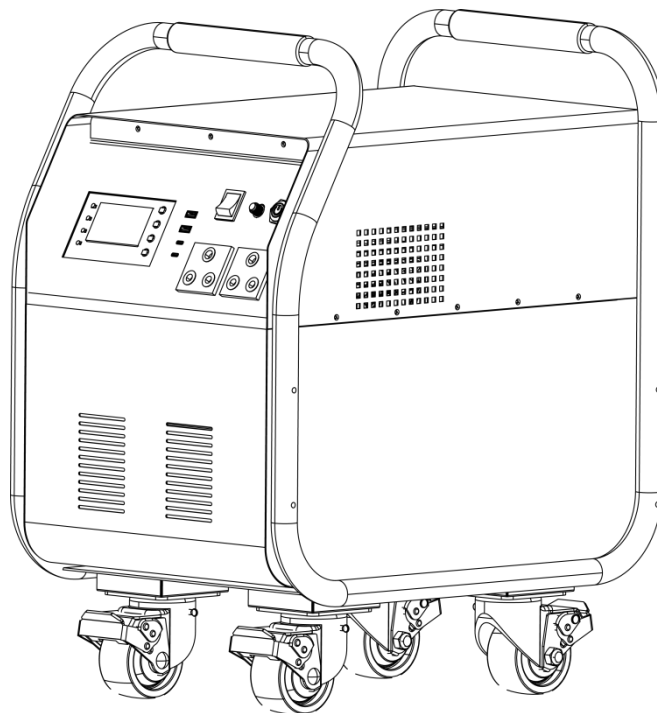

Version 01
Release Date 2023-06-30

Disclaimers

- After reading, keep the user's manual in a safe place for future reference.
- If you do not operate this product accurately, you may cause serious injury to yourself or others, or damage to the product and property damage.
- By using this product, you will be deemed to have understood, acknowledged and accepted the terms and content of this document in its entirety. Users undertake to be responsible for their own actions and all consequences arising therefrom. The company shall not be liable for all losses caused by the user's failure to use the product in accordance with the User Manual.
- Subject to compliance with laws and regulations, the Company has the final right of interpretation of this document and all related documents of this product. As the product information is updated, revised or terminated without notice, please pay attention to the latest product information on the official website.

Special Important Notice

In any case, the voltage of the PV input is not allowed to exceed 180 V (calculated by open circuit voltage series value of PV module) , otherwise this equipment will be irreversibly damaged, and the resulting damage is not covered by the warranty.

Contents

Product Profile	1
Product Features	1
Solar System Connection	2
Product Overview	2
Product Specification	3
Installation Procedures	5
Front LCD Display Panel Operation Procedures	6
Suggested Wire Diameter Of Connected Cable	8
CAUTION	9
Transportation & Storage	10

Product Profile


This product is developed to meet the power supply needs for home or outdoor work, and our company independently owns all software and hardware patents and intellectual property rights under this product.

The product adopts digital design concept, intelligent sine wave output, adapts to various loads and has a rich selection of external output interfaces; excellent output short-circuit protection design, can withstand the impact of high-current starting loads; one-touch intelligent switch design, easy to operate; widely used in household electrical equipment, communication equipment, as well as single-phase power equipment, and even industrial equipment, etc.


Product Features

- Intelligent chip control, superior performance
- High robustness, pure sine wave AC output, strong ability to bear different loads
- Strict short circuit protection design, very reliable working
- Simple LCD display, clear display of working status
- Intelligent charging control, extend the service life of the battery
- All-round protection, safe and reliable
- Adapt to a wide range of temperatures and high altitude areas
- Adapt to unstable grid charging environment
- Lightweight and portable, ultimate volume energy density and weight energy density

Solar System Connection

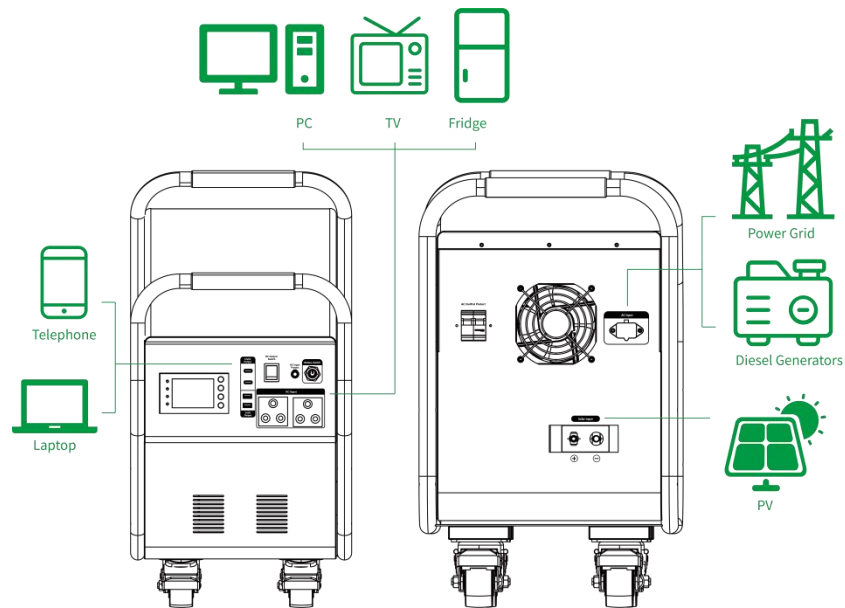

Product Overview

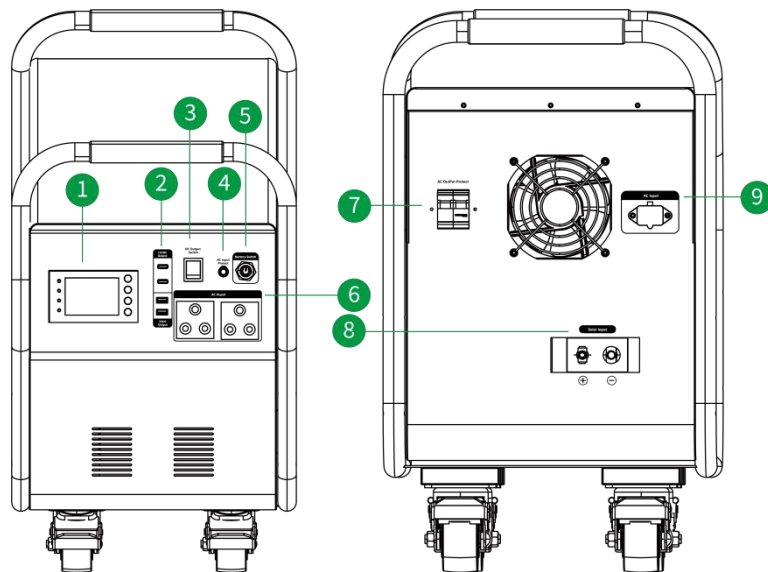

- | | |
|---------------------|------------------------------|
| ① LED | ② 12VDC Output / 5VDC Output |
| ③ DC Output Switch | ④ AC Output Switch |
| ⑤ Battery Switch | ⑥ AC Output |
| ⑦ AC Output Protect | ⑧ Solar Input |
| ⑨ AC Input | |

Product Specification

		PVG 2	PVG 3
Product Information	Product Capacity	2560WH (25.6V 100AH)	2560WH (25.6V 100AH)
	Certified	CE, ROHS, UL, UN3840	CE, ROHS, UL, UN3840
	Product Size	514*344*620mm	514*344*620mm
	Conversion Efficiency	≥90%	≥90%
	Cycle Life	3000 times +	3000 times +
	Material	SPCC	SPCC
Output Port	AC Output	220~230VAC, 50HZ/60HZ 9A, 2000W(MAX)	220~230VAC, 50HZ/60HZ 9A, 3000W(MAX)
	Usb-A Port (×2)	QC3.0: 3.6V ~ 6.5V@2A, .5V ~ 9V@2A, 9V ~ 2V@1.5A(MAX=18W)	QC3.0: 3.6V ~ 6.5V@2A, .5V ~ 9V@2A, 9V ~ 2V@1.5A(MAX=18W)
	Usb-C Port (×2)	QC4.0+: 5V=3A, 9V=3A, 12V=2.25A(MAX=27W)	QC4.0+: 5V=3A, 9V=3A, 12V=2.25A(MAX=27W)
	PV Power	1800W	1800W
Input Port	DC Input	25.6VDC 100A (MAX)	25.6VDC 100A (MAX)
	AC Input	190-280 VAC, 50HZ/60HZ	190-280 VAC, 50HZ/60HZ
	PV Input	35-180VDC (MAX)	35-180VDC (MAX)
Battery Information	Battery Type	Lithium iron phosphate	Lithium iron phosphate
	Protective Function	Overvoltage protection, undervoltage protection,	Overvoltage protection, undervoltage protection,




		overcurrent protection, short circuit protection, temperature protection	overcurrent protection, short circuit protection, temperature protection
	Discharge Temperature	-20 ~ 60℃	-20 ~ 60℃
	Charge Temperature	0 ~ 55℃	0 ~ 55℃
	Working Humidity	<90 %RH	<90 %RH
	Storage Humidity	<90 %RH	<90 %RH
	Size	320*235*165mm	320*235*165mm
	Weight	18±0.5kg	18±0.5kg
	Accessories	Great South African Charging Cable	Great South African Charging Cable

Installation Procedures

1. Before connect the cables, please check the product to ensure that the start button, AC input protection switch and inverter output protection switch are off.
2. Connect with solar panels: Red PV+ is the solar input positive terminal, black PV- is the solar output negative terminal. In any case, the voltage of the PV input is not allowed to exceed 180 V (calculated by open circuit voltage series value of PV module) , otherwise this equipment will be irreversibly damaged, and the resulting damage is not covered by the warranty.
3. AC connection, no need to connect AC if there is no AC. AC INPUT is AC/ alternator generator input, L is fire line, N is null line, G is ground line.
4. Connect with loads: AC OUTPUT is the inverter output, L is the fire wire, N is the null wire, G is the ground wire, and the AC output protection switch should be installed by yourself.
5. Double-check the wiring to prevent wrong connections, missed connections, or short circuits.
6. press the power on button first, after the machine beeps. In turn, close the power input protection switch, photovoltaic switch, as well as the addition of all switches.
7. Check the LCD data to ensure that the machine has been working properly, the correct installation is complete; (independent installation errors lead to machine can not work, man-made intentional damage, independent dismantling, force majeure factors, the above are not in the scope of free repair)
8. If you are unable to determine the installation, please contact the factory customer service and technical personnel.

Front LCD Display Panel Operation Procedures

Step No.	LCD Display & Operation Process
1	<div><div><div>AC IN <input type="checkbox"/></div><div>Inverter <input type="checkbox"/></div><div>Charge <input type="checkbox"/></div><div>Alarm <input type="checkbox"/></div></div><div><div><div><div><div><div></div><div>00.0A</div></div><div><div></div><div>BAT: 54.8V</div></div><div><div></div><div>LOAD: 0%</div></div></div><div><div>Inverter Mode</div><div>Priority: AC</div></div></div></div><div><div><div>ESC</div><div>UP</div><div>Down</div><div>Enter Confirm</div></div></div></div><div><div>1) Connect the loads, battery and AC, switch the power button(ON),enter into the first page as above photo.</div><div>2) All English operation display, can intuitive inverter all running state and alarm state;</div><div>3) The first button is "return" second button is "turn up", the third button is "turn down", the forth button is "confirm the current setting parameter / or keep 3 seconds will enter into setting mode".</div></div></div>
2	<div><div><div>AC IN <input type="checkbox"/></div><div>Inverter <input type="checkbox"/></div><div>Charge <input type="checkbox"/></div><div>Alarm <input type="checkbox"/></div></div><div><div><div><div><div>MPPT(1)</div><div>PV. Volt: 106.5V</div><div>Out. Curr: 000.0A</div><div>PV. Power: 0000.0W</div><div>PV. Total: 0000.1kwh</div><div>Out. Volt: 055.0V</div></div><div><div>MPPT(2)</div><div>000.0V</div><div>000.0A</div><div>0000.0W</div><div>0000.0kwh</div><div>000.0V</div></div></div></div><div><div><div>ESC</div><div>UP</div><div>Down</div><div>Enter Confirm</div></div></div></div><div><div>1) Press "turn down "button, enter into the page as second photo;</div><div>2) page shows: PV voltage, charging current, generation power, gross generation, MPPT module(status, temperature, output voltage).</div></div></div>

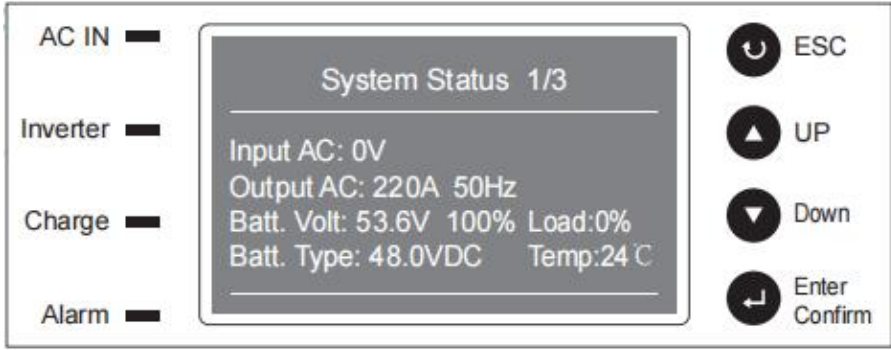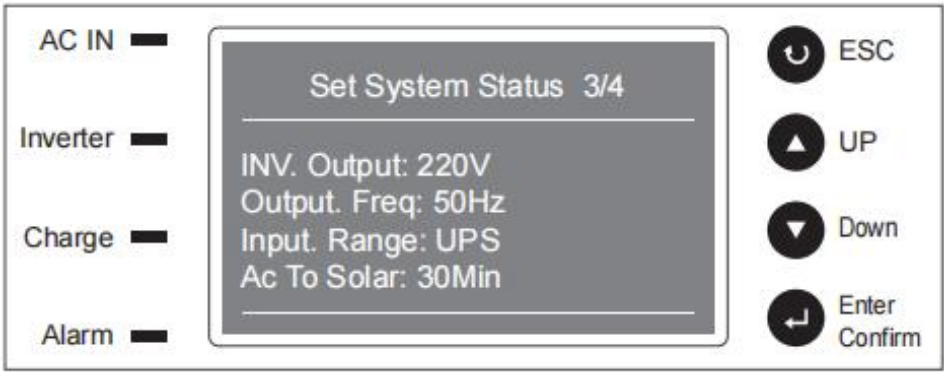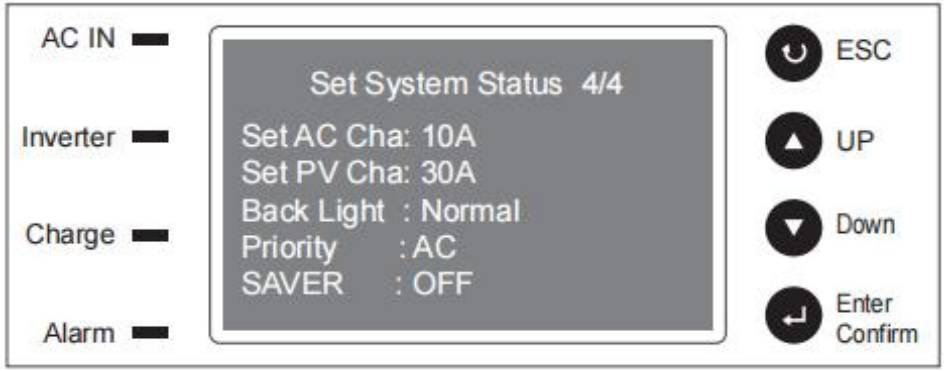3	 <p>1) Press "turn down "button, enter into the page as third photo;</p> <p>2) Page shows: AC input voltage, inverter output voltage, battery voltage, battery types, output frequency, loads percentage and inverter running temperature.</p>
4	 <p>1) Press "DOWN" button , enter into the setting page as fourth photo;</p> <p>2) This page shows: setting AC output voltage, frequency, AC input range and recover to battery discharge delay time.</p>
5	 <p>1) Press "DOWN" button, enter into the setting page as fifth photo;</p> <p>2) This page shows: setting AC charging current , MPPT charging</p>

	current, backlight, priority mode and ECO mode.
Step No.	LCD Set Operation
1	<div data-bbox="379 360 1321 725"> <p>The image shows a control panel with four indicator lights on the left: AC IN, Inverter, Charge, and Alarm. In the center is a monochrome LCD screen displaying the 'System Set' menu. The menu items are: 'Set AC Cha: 10A' (with '10A' highlighted), 'Set PV Cha: 30A', 'Back Light : Normal', 'Priority : AC', and 'SAVER : OFF'. On the right side of the panel are five circular buttons: 'ESC' (power symbol), 'UP' (up arrow), 'Down' (down arrow), and 'Enter Confirm' (enter symbol).</p> </div> <ol style="list-style-type: none"> 1) Connect the load and utility, press the ON button, and enter the above display page.; 2) AC charging types: five types can be adjustable (can switch off AC charging); 3) PV charging types: six types can be adjustable, can switch off PV charging (only the hybrid inverter with controller); 4) Backlight setting: Normal/ ON can be adjustable; 5) Priority mode : ON/OFF can be adjustable; 6) ECO mode: ON/OFF can be adjustable.

Suggested Wire Diameter Of Connected Cable

Wire Diameter Of Cable (mm) = Single Circuit Rated Current (A) / (6A/mm)

- 1) PVC insulated copper core wire (@70°C) .
- 2) Temperature is lower than 40°C.
- 3) If the above conditions can not be reached, please use strong cables.

CAUTION

- Installation is to be performed by qualified technicians in accordance with relevant local safety standards.
- This product is suitable for charging batteries from solar modules of the same voltage level and power.
- Do not allow the solar input to be connected to other types of charging power sources, as this will damage the controller.
- There should be 2.5CM space on the top and around the product for air circulation.
- DC output is not allowed to connect to motor type load and the load current is less than the rated current.
- Solar module connection: Press the "solar switch" on the rear panel, the "BATTERY" indicator light is on, the voltage and power of the solar module should be within the input range of the charger. The positive terminal of the solar module is connected to the red terminal "S+", and the negative terminal is connected to the black terminal "S-". The "SOLAR" light is on to indicate that the solar module input is normal; when the inverter is not used for a long time and the solar module is not charging its battery, the "SOLAR SWITCH" can be turned down to reduce the battery depletion.
- AC load connection: Press "ON/OFF" for three seconds, when the sound of buzzer release is heard, the inverter operation starts, at this time, the AC output voltage pointer on the panel is the DC output voltage of the inverter, to ensure the power of the AC load is within the range of the inverter, connect the power and load plug to the "OUTPUT" of the panel.

Transportation & Storage

Transportation

Please check the package for damage upon receipt of the shipment. If there are missing accessories or the product is damaged, please notify the dealer within 7 days after receipt of the goods.

Open Package

Be careful when opening the package and confirm if the machine is complete with relevant parts and if there is any damage.

Carefully confirm that the machine is complete with the relevant parts and that there is no damage. If there is any damage, please contact your seller.

Storage

Machine should be stored in the clean, dry (0°C-35°C) environment.

Transportation

Machine must keep stand and transported cautiously, any fall or strong shock may spoil machine.



CF Energy Co., Ltd.

Company Address:

Intelligent Manufacturing Base , Xianyang , Shaanxi , PRC .

Tel: (+86) 029-38367888

Web: www.cfenergygroup.com

E-mail: sales@cfenergygroup.com

© 2023 CF Energy Co., Ltd. All rights reserved. Subject to change without notice.

Version 1.2